

Home > Scan > Settings to Scan Various Types of Originals (Application Settings)

Settings to Scan Various Types of Originals (Application Settings)

Scanning originals of varying sizes in a batch ([Mixed Original])

Even for an original with pages of different sizes, by using the **ADF**, you can scan data while detecting the size of each page.

For details, refer to [Here](#).



NOTICE

- ❖ Load all the original pages into the **ADF** so that the tops of the pages are at the back or left side of the machine.



Scanning an original that is thinner than plain paper ([Thin Paper Original])

Reduce the original feed speed of the **ADF** to prevent thin paper from getting caught.

For details, refer to [Here](#).



Scan originals with folds ([Z-Folded Original])

Even the original sizes of folded originals can be detected accurately.

 
If a folded original is loaded into the **ADF**, the original size may not be able to be detected accurately. To scan a folded original through the **ADF**, use [Z-Folded Original].

For details, refer to [Here](#).



NOTICE

- ✘ Unfold folded originals before loading them into the **ADF**. If a folded original is not unfolded before scanning, a paper jam may occur or the size may not be correctly detected.

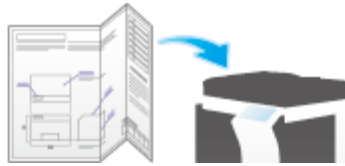

Scanning a long original ([Long Original])

Load a long original that cannot be placed on the **Original Glass** and that is larger in the feeding direction than the full standard size (A3 or 11 × 17) into the **ADF**. There is no need to enter the original size in advance; the **ADF** will automatically detect the size.

 
For details, refer to [Here](#).



Specifying the original loading direction ([Original Direction])

When scanning a 2-sided original etc., you can specify the direction in which the original is loaded so that the vertical direction is set correctly.

For details, refer to [Here](#).

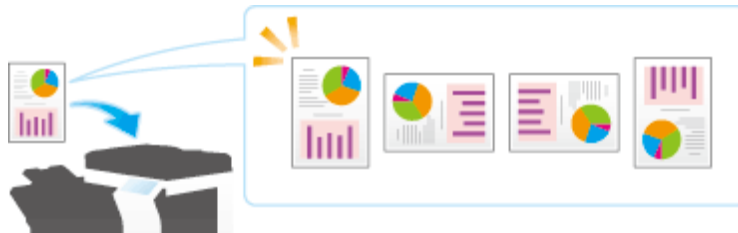

Specifying the original binding position ([Binding Position])

When scanning a double-sided original, specify the binding position of the original in [Binding Position] to prevent the binding position from being reversed between the front and rear faces.

For details, refer to [Here](#).



Scanning while removing dust from the slit glass ([Despeckle])

When the **ADF** scans an original, scanning of the original(s) and removal of dust from the **Slit Scan Glass** are performed alternately so that the original is always scanned on clean **Slit Scan Glass**.

It takes longer to finish scanning, compared to the normal operation.

For details, refer to [Here](#).

Skipping blank pages ([Blank Page Removal])

Blank pages contained in the original loaded into the **ADF** are skipped when the original is scanned.

For details, refer to [Here](#).



Splitting the left and right pages of a book and catalog ([Book Original])

You can scan two-page spreads such as books and catalogs separately into left and right pages, or scan them as one page. If you place a book or catalog on the **Original Glass**, you do not need to close the **ADF** to scan it.

For details, refer to [Here](#).



Scanning a number of originals ([Separate Scan])

If the number of original sheets is so large that they cannot be loaded into the **ADF** at the same time, you can load them in several batches and handle them as one job.

In [Separate Scan], you can switch between the **ADF** and **Original Glass** to scan the originals.



 
1. Load the original.



NOTICE

- Do not load more than 100 sheets at a time into the original tray, and do not load the sheets up to the point where the top of the stack is higher than the ▼ mark. Doing so may cause an original paper jam, damage the originals, and/or cause an ADF failure.

2. Tap [Application] - [No. of Originals] - [Separate Scan], and set to [ON].

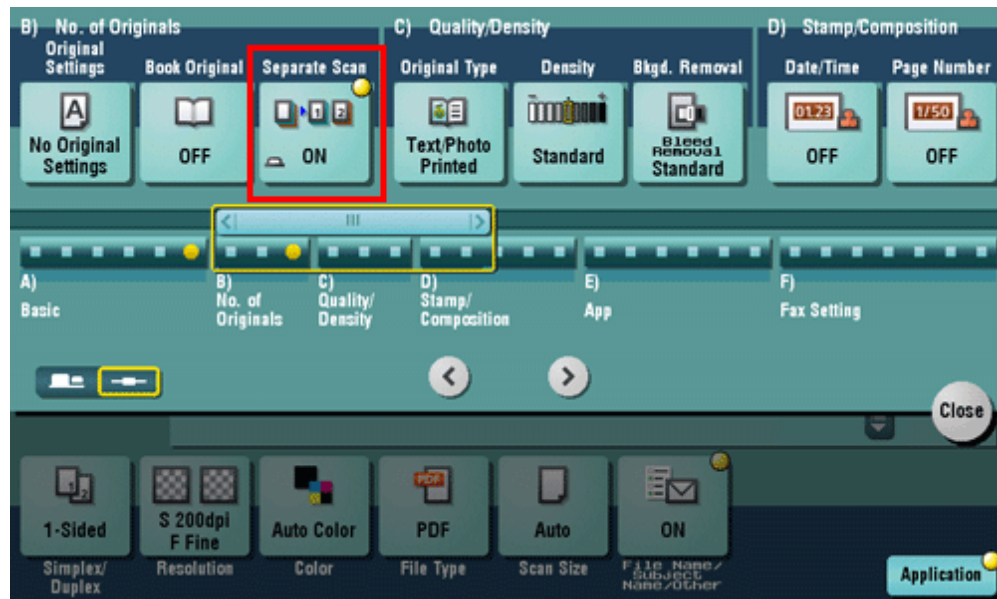


3. Press the Start key.

The original is scanned.

4. Load the next original, then press the Start key.

 ➔ Tap [Change Setting] to change the option settings according to the new original as necessary.

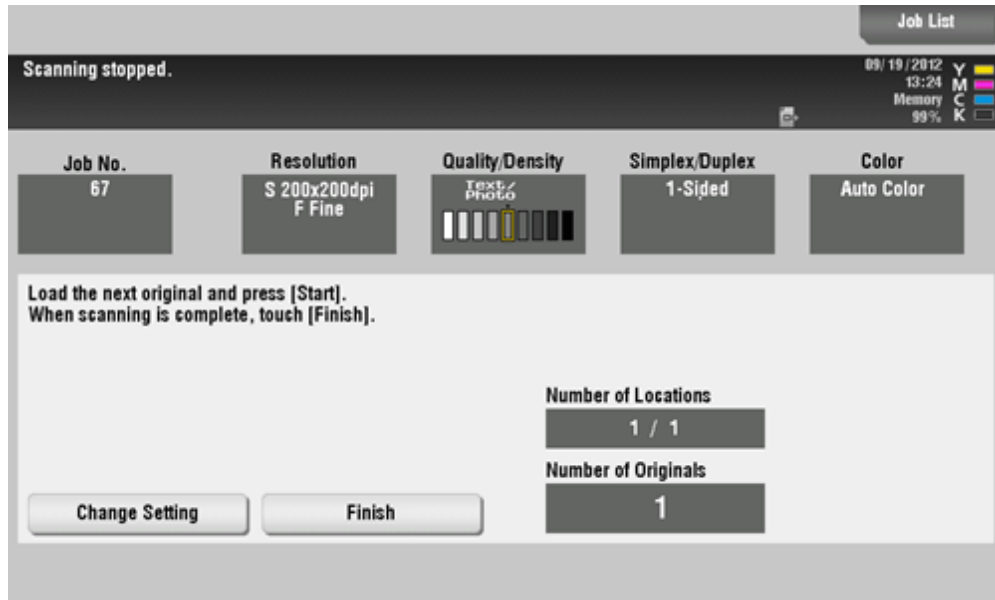

5. Repeat Step 4 until all originals are scanned.

6. After all originals are scanned, tap [Finish] and press the Start key.

Sending starts.



Related setting

- ❏ Select whether to always scan originals continuously without specifying [Separate Scan] when scanning originals using the **Original Glass** (Default value: [No]). For details, refer to [Here](#).